EFLECT **dedolight®

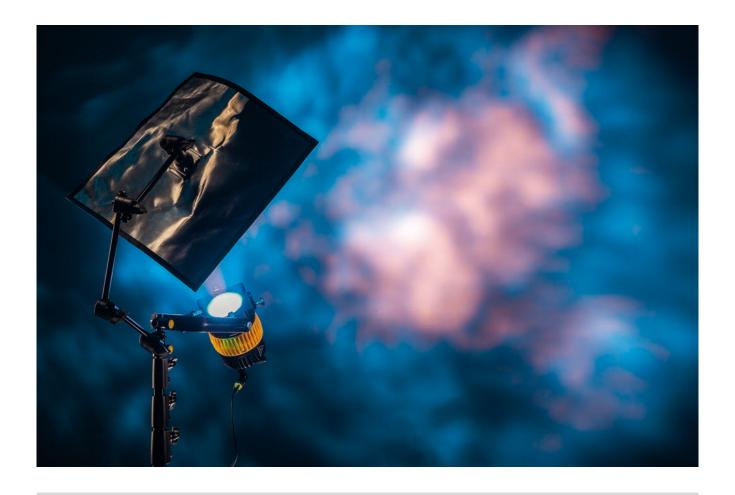






TABLE OF CONTENT

Introduction	Page 4
Types of Reflectors	Page 5
Mounting	Page 6
Filters	Page 7
Kits	Page 8
Setup for different effects	Pages 9-10
Examples	Pages 11-1 <i>4</i>



EFLECT - REFLECTIONS AND EFFECT

CREATION - EMOTION - ENDLESS VARIATION

- Gentle flowing blending of light and color like blossoms on a lake, seen through a gentle diffusion
- Hues of color and light, like early-morning sun with a slight haze shining through a cherry blossom tree
- The Tools. Light heads multi-mirror reflectors, holding arms simple-looking tools
- Setup, light up and a miraculous variety of light and color appears, like incredible blossom in the desert after the rain like a myriad of butterflies creating unbelievable patterns of color and light What makes such an incredible variety of impressions and emotions possible?

- Focusing the dedolight produces an entire range of light effects.
- Bending/shaping the multi-mirror reflectors spread, change and arrange the reflection
- Changing the distance from light head to reflector:
 - At close proximity gentle, overlapping flow
 - Medium distance: creative blends
 - Further away (using 2 separate light stands) sun spots through a leaf tree

Introduction to the tools

These consist of a combination/symbiosis of the unique optics of our 21 focusing dedolights, sometimes used in their original shape and performance, sometimes changed and enhanced by adding the unique parallel beam intensifiers


The Reflectors

A choice of unique multi-mirror reflectors.


The colors: provided by dual color filters, that at first look appear uninspiring and simple.

THE MULTI-MIRROR REFLECTORS

EFLECT Large multi-mirror Reflectors 45x45cm (18x18")

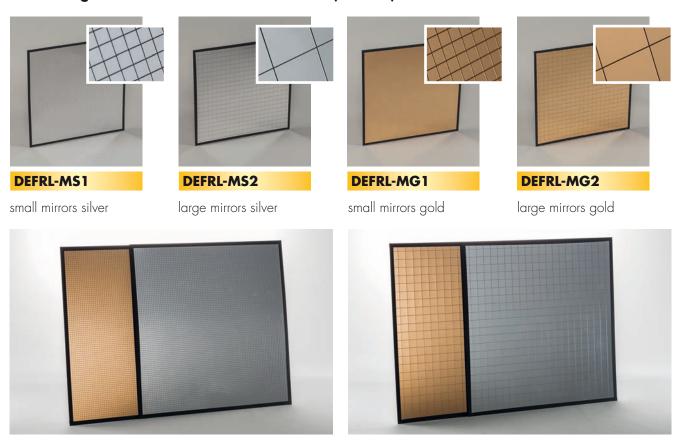

Baby EFLECT 20x20cm (8x8")

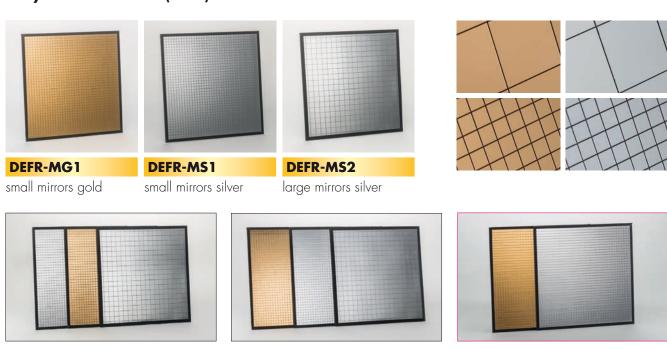

MOUNTING SYSTEM AND DEVICES





Eflect large system shares the same mounting system as used on the dedolight Lightstream reflectors.

The attachment to the lighting stand or other grip equipment is flexible by the multi-link adjustable holding arm.

Attachment to the lighting stand allows to attach the smaller focusing dedolights on the same mounting attachment.





The small Eflect system attaches the reflectors with a magnet, and uses for changing directions and positions a flexible arm, again ending in a mounting device that attaches to the lighting stand or other grip equipment, allowing at the same time the direct attachment of a smaller focusing dedolight light head.

THE EFLECT FILTERS

Simple-looking filters in sizes to fit classic dedolight size 7,5x7,5cm, delivered in filter-holding frames.

Sets of dual color filters in two sizes:

- 7,5x7,5cm (3x3") for the direct insertion of the classic halogen dedolights DLH4, 150W, as well as for the focusing dedolight LED lights DLED4, DLED7, and also for the DLH200, the focusing dedolight HMI fixture.
- 12,7x12,7cm (5x5") to fit the larger focusing dedolight LED lights, like DLED9 and DLED10, as well as the DLH400 400/575W metal halide / HMI fixture, as well as the 650W focusing halogen light.



The Filters

Looking at them in your hand looks totally uninspiring and simple. Insert them on the light head, and each variation of focus produces an incredible blend of unexpected colors.

I can't find adequate words to describe this surprising variation – the unbelievable palette of color blends and multitude of light characters.

From the uninspiring appearance of the tools to a sheer blend of colors, light and beauty, like a wonderful butterfly escaping ist grey cocoon.

Multicolor Gel Folien

Attention

On the hot lights (halogen or HMI) the filters may not live for many hours without warping and eventually bleeching. On all the focusing LED lights they should work efficiently for a long time.







DEFLP

Soft case large



SEFL-1C

Eflect Kit large (2)



SEFL-4C

Filters optional, choose size - Eflect Kit large (4)



DEFP


Soft case Baby




SEF-B

Soft case Kit EFLECT - Baby, Filters optional - choose size

shown here at close proximity, providing gentle flowing effects

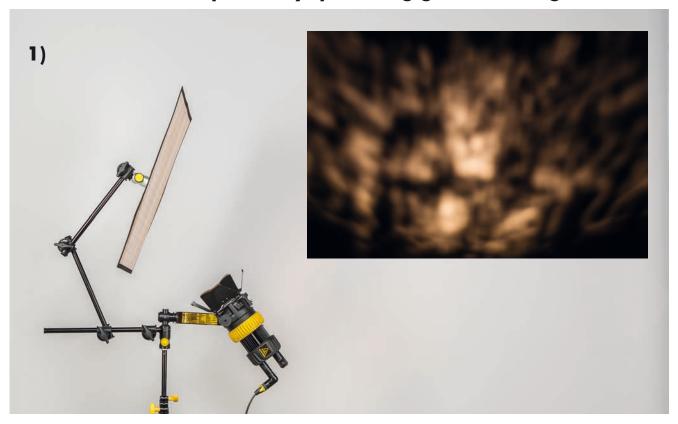

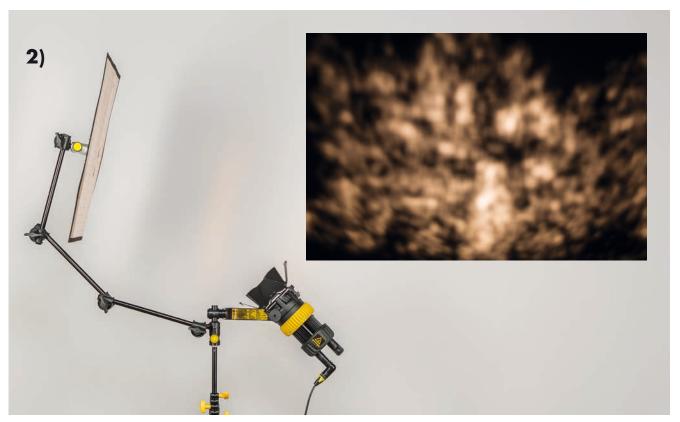

at medium distance, showing more distinctly separated effects

at larger distance (possibly using 2 separate lighting stands)


More distinct lighting effects, better separation.









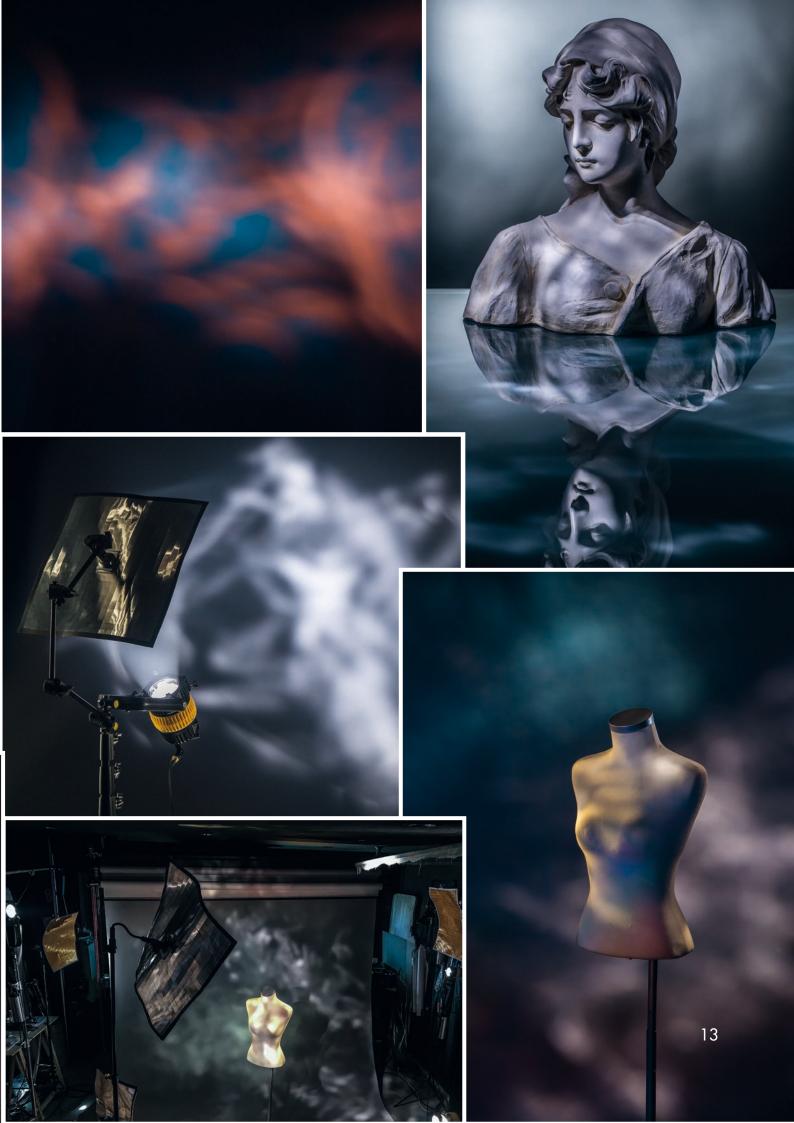



Eflect Large 45x45cm, silver large mirrors, light head in flood, 1,20m distance



Eflect Large 45x45cm, gold large mirrors, light head in flood, 1,20m distance



Eflect Large 45x45cm, Silver large mirrors, light head in spot, 1,20m distance



Eflect Large 45x45cm, gold large mirrors, light head in spot, 1,20m distance



Eflect Large 45x45cm, Silver small mirrors, light head in flood, 1,20m distance



Eflect Large 45x45cm, gold small mirrors, light head in flood, 1,20m distance



Eflect Large 45x45cm, Silver small mirrors, light head in spot, 1,20m distance



Eflect Large 45x45cm, gold small mirrors, light head in spot, 1,20m distance

BEND AND SHAPE







Yes, we want you to bend and shape, and form the Eflect surface. That is the key to the multitude of effects.

What may happen?

Some of the mirror elements attached to the special carrier material may (partially) become unstuck and protrude.

Usually it is possible to bend them back and apply pressure to make everything return to normal. The dedolight light fixtures have amazed many professionals by working perfectly after nearly 40 years of use.

Your Eflect boards will not last that long with a lot of warping and bending (can't always have butter on both sides of the bread). They are priced to be replenished.

In other words, there is no warranty on the bendable reflectors.





Dedo Weigert Film GmbH

Karl-Weinmair-Straße 10 D-80807 Munich, Germany

Phone: +49-(0)89 - 356 16 01 Fax: +49-(0)89 - 356 60 86

info@dedoweigertfilm.de www.dedoweigertfilm.de